




**Omega National**  
P R O D U C T S


## Super Susan with Aluminum Bearing Installation

### Installation Instructions


**Step 1:** Remove access hole cap and position the Susan in the cabinet. Make sure that the plastic catch is in the locked position.

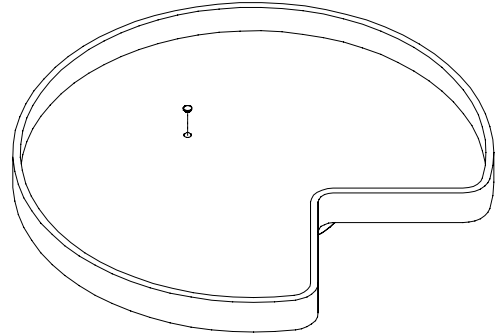

**Step 2:** Screw the aluminum bearing to the shelf through the access hole using a #8 Flat Head Screw of the appropriate length for the shelf thickness. Be careful not to move the Susan.

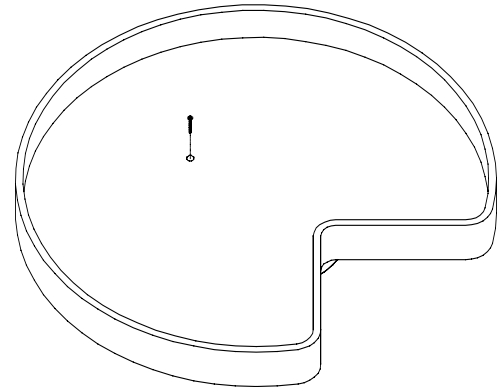

**Step 3:** Push down on the Susan to keep the Aluminum Bearing from moving and turn the Susan 60 degrees. Screw the aluminum bearing to the shelf through the access hole using another #8 Flat Head Screw. Repeat this step for the last four screws

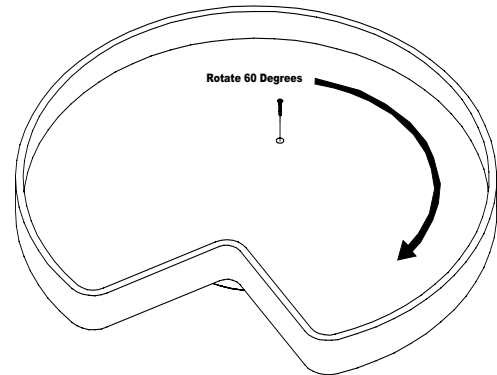

**Step 4:** Make sure the Susan moves freely.